



cair app setup and Wi-Fi configuration guide

Use this when setting up your sensor for the first time.

Also includes a guide on how to re-configure your Wi-Fi settings.

For android users.



Part 1: cair app setup guide

Part 2: App configuration with new Wi-Fi settings

For issues not covered in this guide please e-mail support@cairsensors.com




Part 1: cair app setup guide

Step 1:

Download App from Google Play


- Go to the App list on your phone and search for 'Play Store' app
- Open the Play store app and search for cair sensor
- Open the app listed and press Install and then open the app

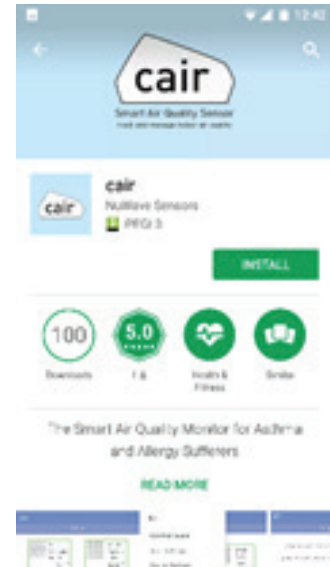

Step 2:


Setup an Account

Once you have opened the app and reviewed the privacy policy and Terms and Conditions please press 'Create Account' button and complete your details.

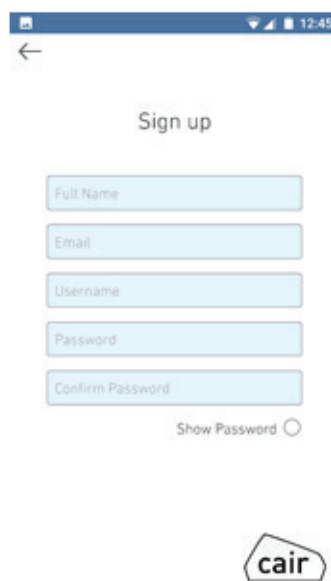

Step 3:

The instructions screen will appear. You will now need to leave the app and connect to your cair sensor by connecting to the NuWave Sensors Wi-Fi network. Once this is completed you can return to the app.


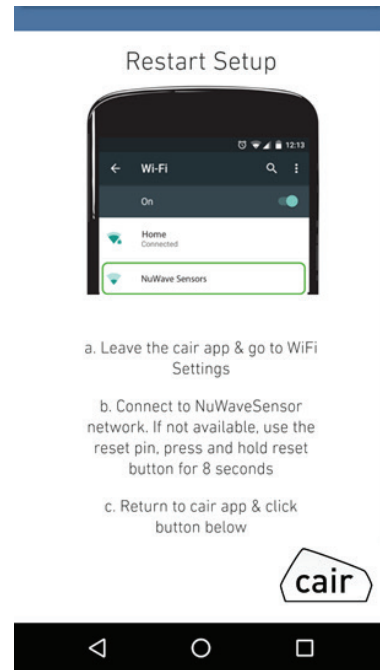


Step 4:

Select NuWave Sensor from the list and press to connect to it

Note:



If you do not see 'NuwaveSensor' on your list of Wi-Fi networks your sensor may not be correctly reset. Please see the last page of this document for a guide on how to reset your sensor.

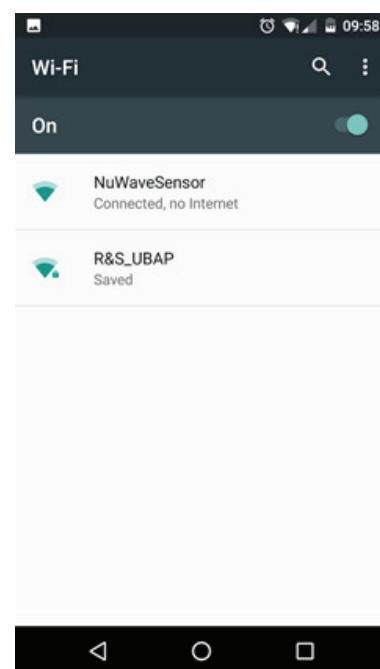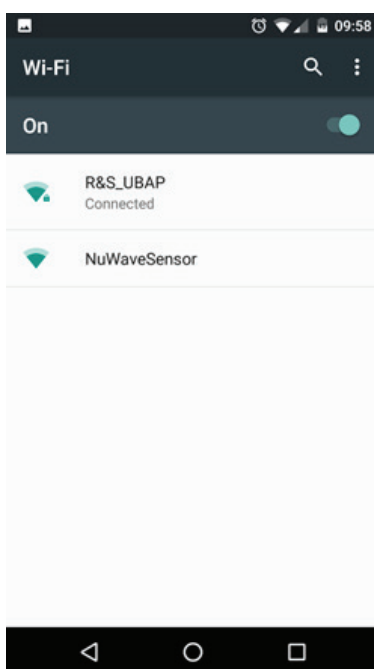

You should see the network status as 'connected'



Step 5:

On some android phones, you may get the following option. Please select this message and confirm that you want to connect to it.

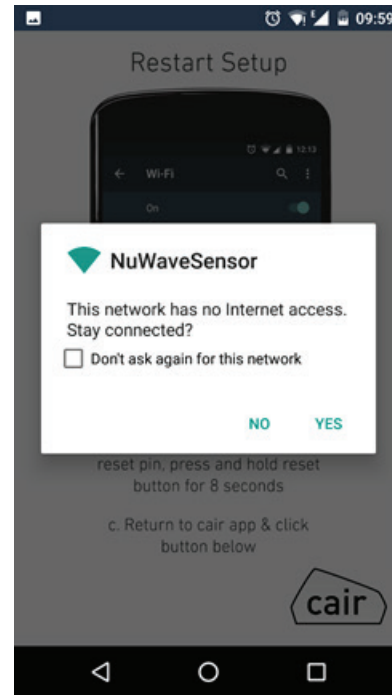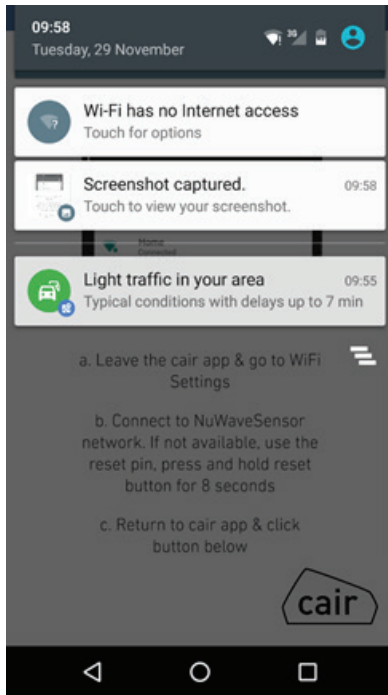

Step 6:

Select your Wi-Fi network from the list and press next. Once selected, you will be prompted to enter your Wi-Fi password. Enter this and press 'Next'

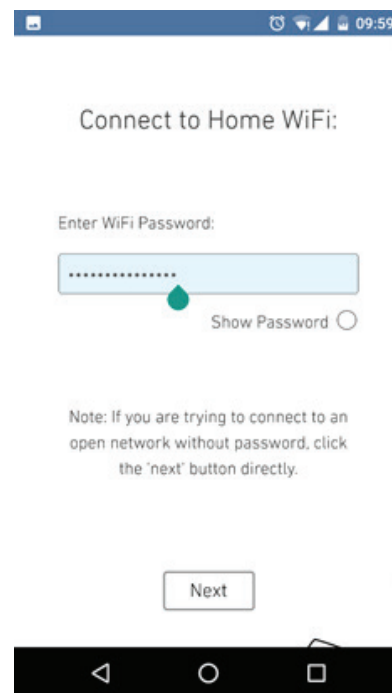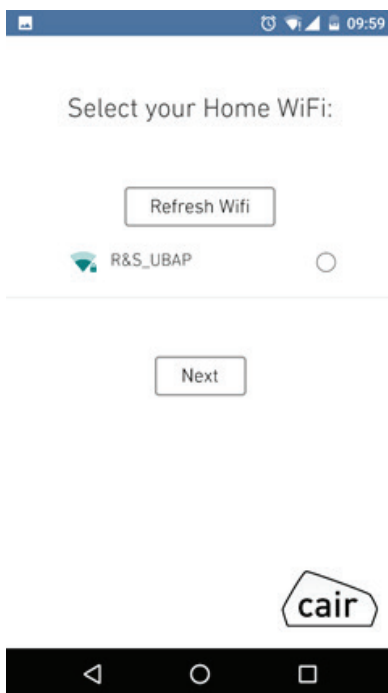



Step 7:



The app will now automatically connect to your Wi-Fi network




You should see the following message once it has completed. As you have re-connected it will take 5 minutes to display data on your app dashboard. You will see the following screens.



Next, follow the below quick steps to finish the sensor setup.

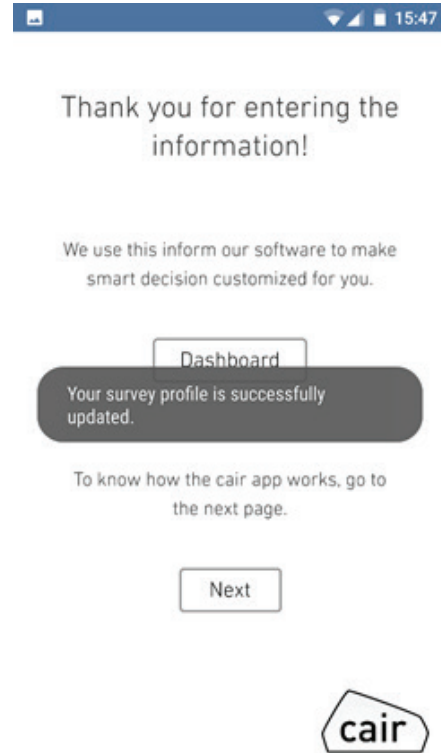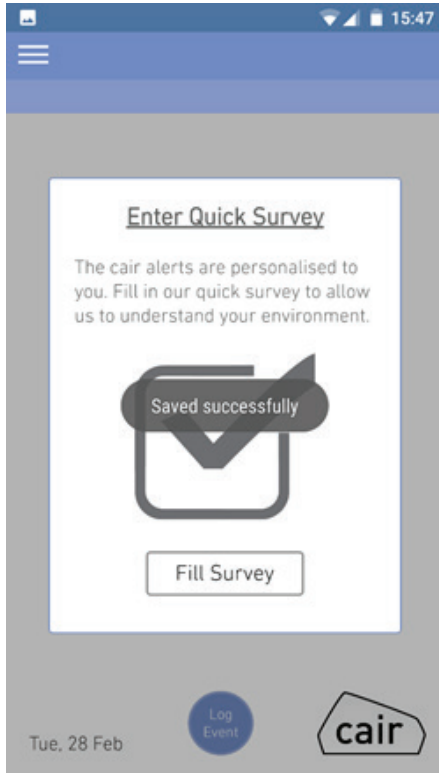

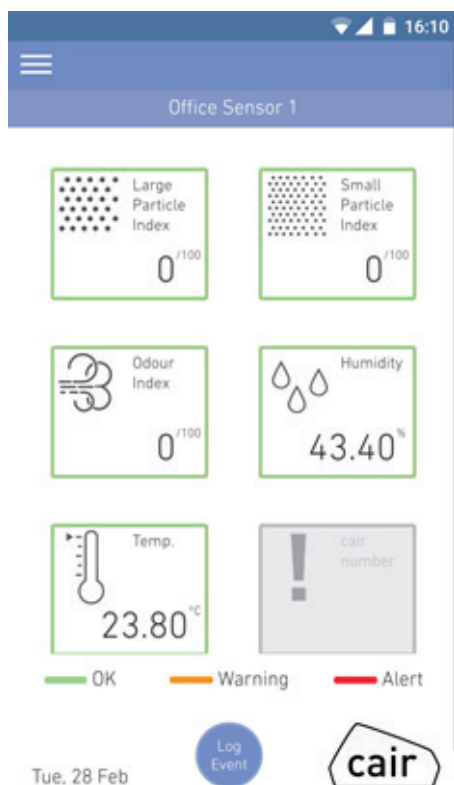

You should now have completed setup.


If you have any issues during setup, please contact: support@cairsensors.com

Part 2: App configuration with new Wi-Fi settings

Step 1:

While the device is powered ON.


Using the reset pin provided – insert the pin and press and hold the reset button for 8 seconds.

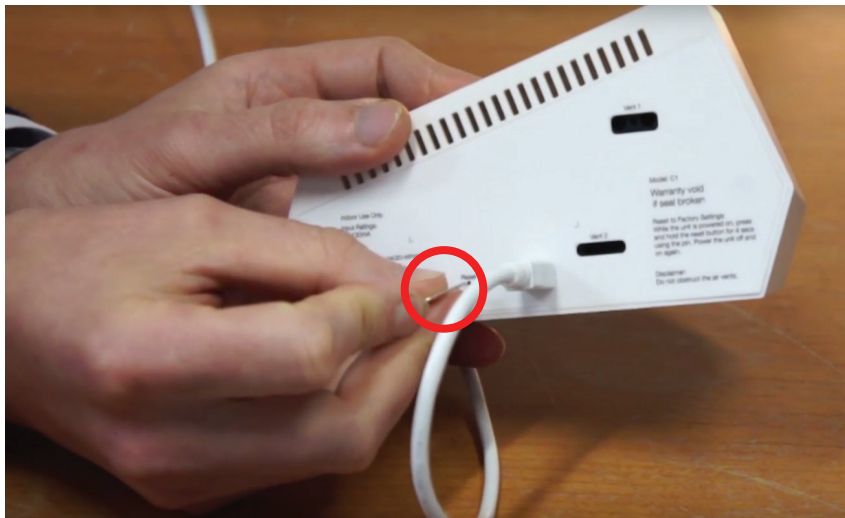


Once this has been completed power the device off and on by unplugging it and plugging it in again.

Step 2:


When logged into the app, please select Device Settings from the menu

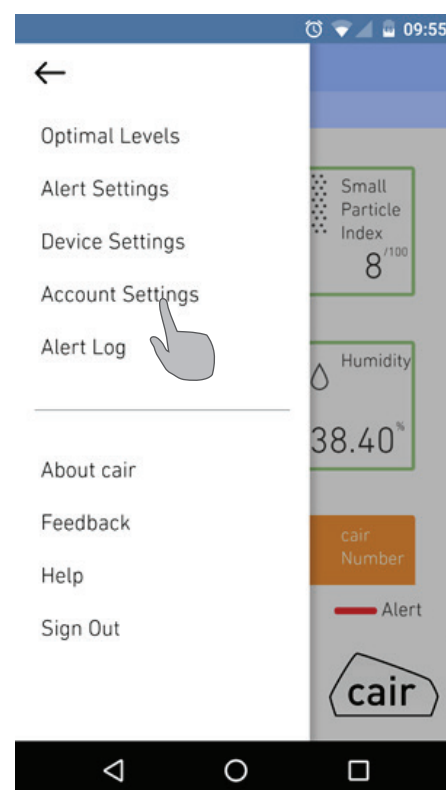


Step 3:
From the menu please
select the Reconfigure
Device Wi-Fi button

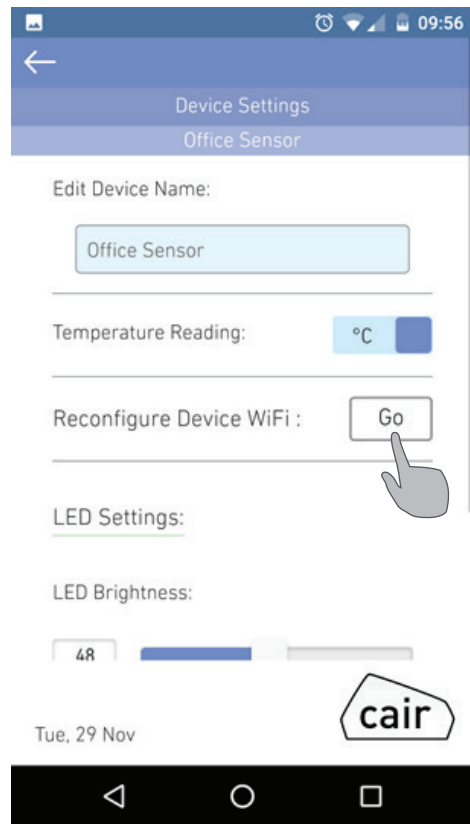


Step 4:
Select 'Reconfigure Now'

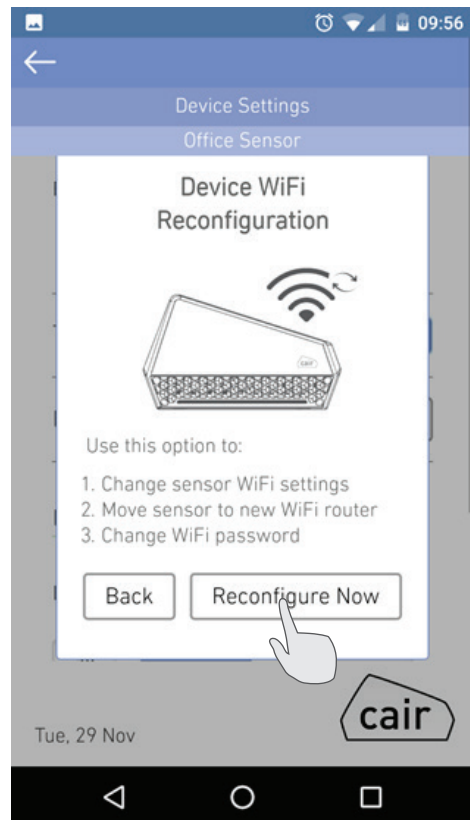

Step 5:
Select 'Next' as shown
on the screen on the
left

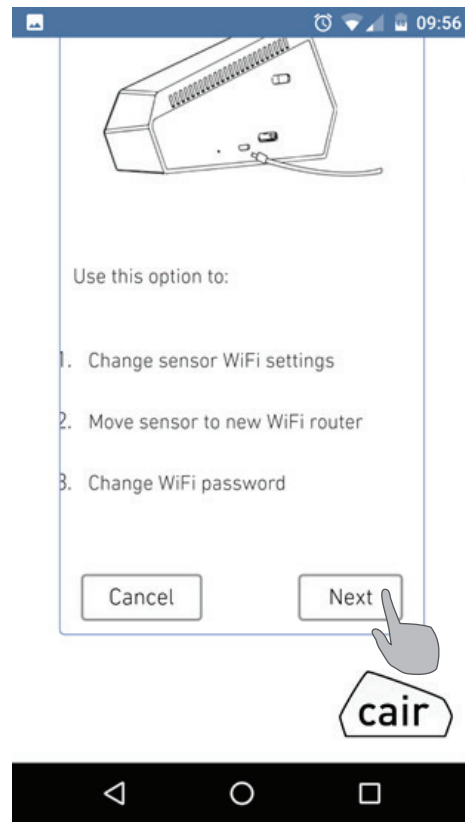


Step 6:
The instructions screen
will appear. You will now
need to leave the app and
connect to your cair sensor
by connecting to the
NuWaveSensor Wi-Fi
network. Once this is
completed you can return
to the app.

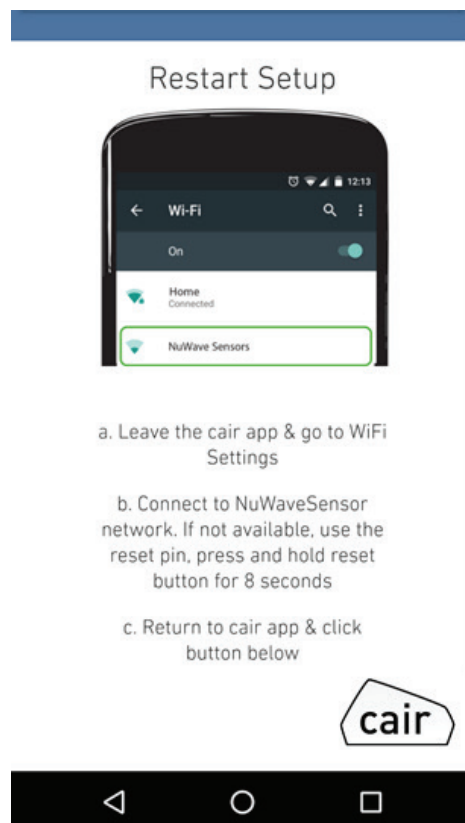


Step 7:
Select NuWaveSensor
from the list and select
it to connect to it.

Note: If you do not see
'NuwaveSensor' on your
list of Wi-Fi networks
your sensor may not be
correctly reset. Please
see Step 1 again to
re-attempt to reset the
sensor.


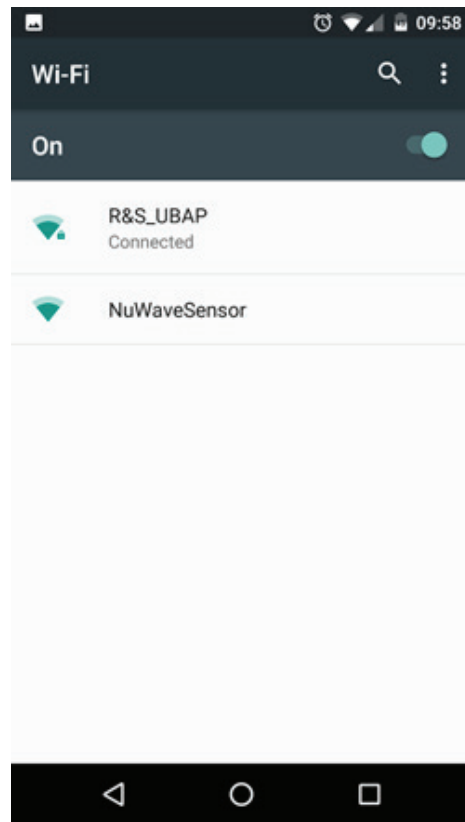


You should see the
network status as
'connected'

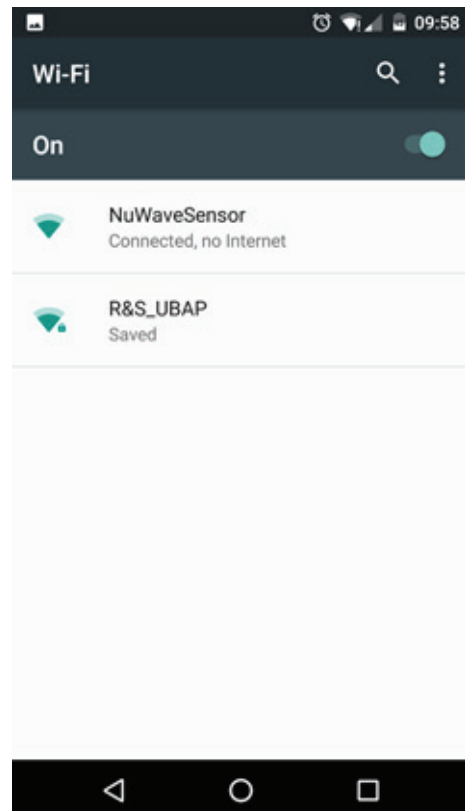





Step 8:
On some android phones, you may get the following option. Please select this message and confirm that you want to connect to it.

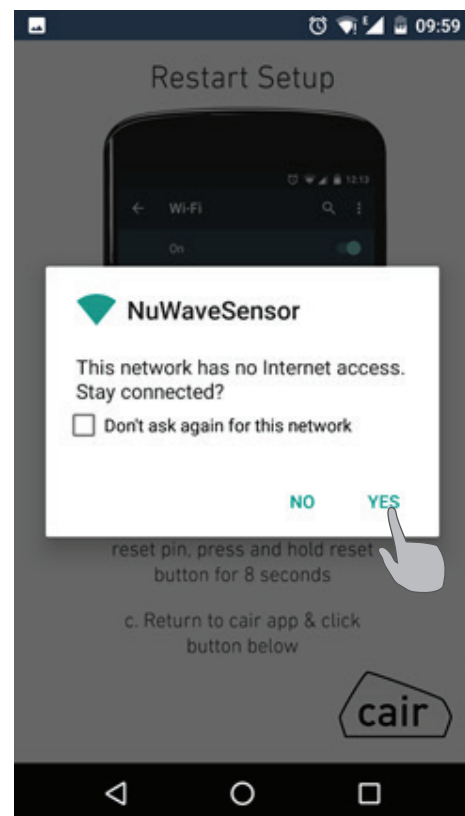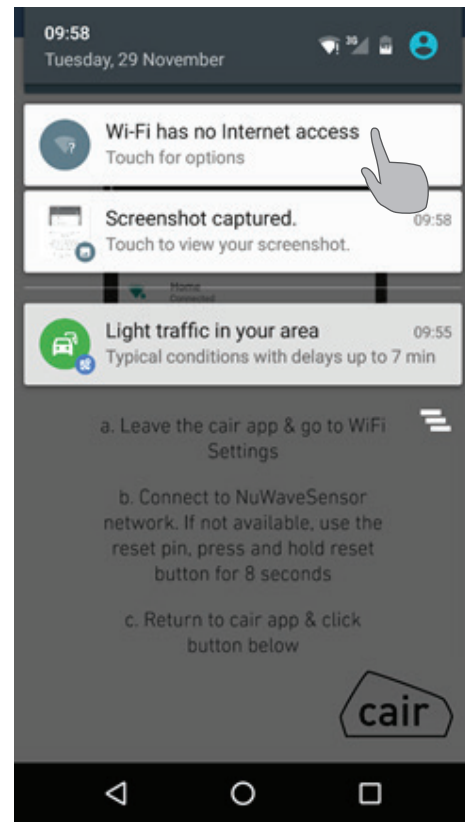

Step 9:
Select your Wi-Fi
network from the
list and press 'Next'

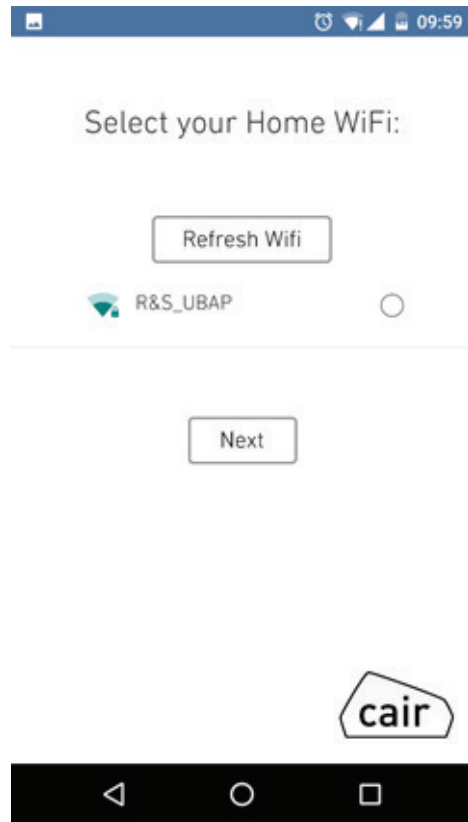

Once selected, you will
be prompted to enter
your Wi-Fi password.
Enter this and press
'Next'

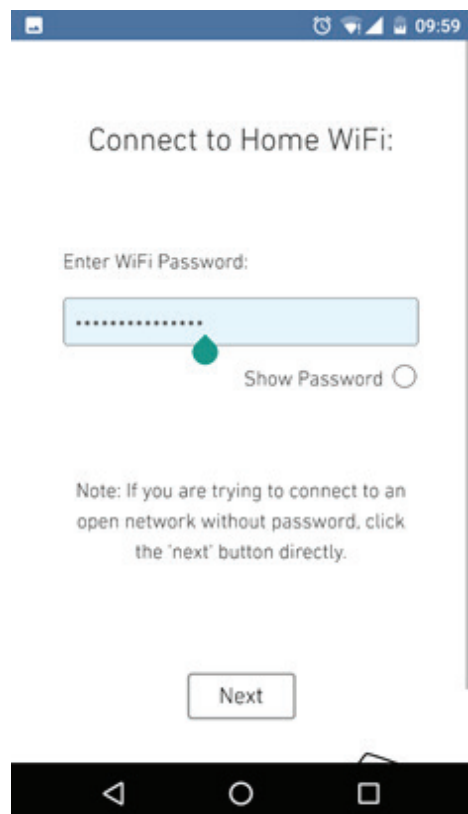



Step 10:
The App will now automatically connect to your Wi-Fi network



You should see the following message once it has completed. As you have re-connected it will take 5 minutes to display data on your app dashboard.



Part 3: Sensor Reset Guide

Perform a reset while the device is powered ON

Using the reset pin provided – insert the pin and press and hold the reset button for 8 seconds.



Once this has been completed power the device off and on by unplugging it and plugging it in again.

Your sensor should now be reset. The LEDS on the sensor should start to blink Green and you should see NuWaveSensor listed on the list of available Wi-Fi networks;

